 


USER'S MANUAL FOR WALL SCREEN

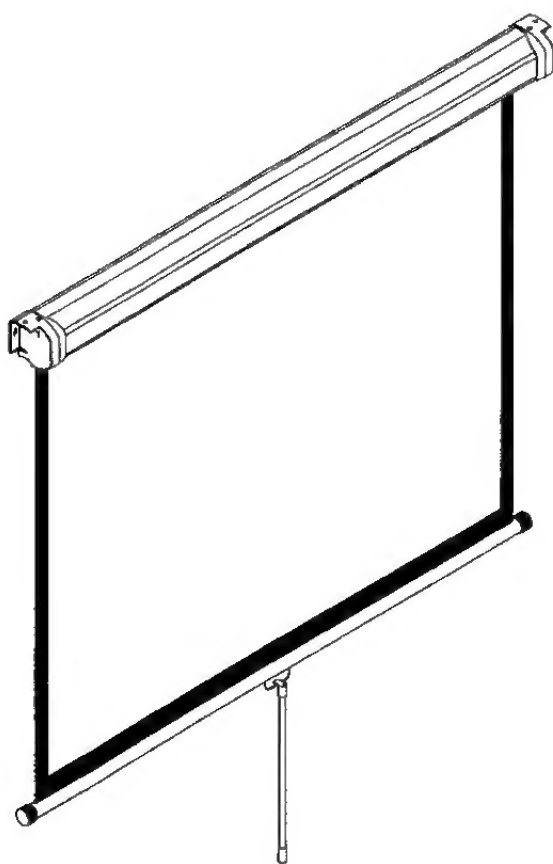

Please always follow the instruction on user's manual
in assembling and usage.



SAFETY GUIDE:

When assembling, it is forbidden to stand in right under the screen to avoid any hazard. Expansive bolt should be firmly punched and fixed into the wall or ceiling.

SPECIFICATION:

1. Exclusive patented buffer deceleration device make the fabric rise fluent in even speed.
2. Patented self-locking device with advanced bearing design, reliable locked and smooth operation, low noise.
3. Very easy assemble methods: suitable for both wall and ceiling hung.
4. Flat screen surface flame retardant, mildew resistant, no peculiar smell, hard distortion and induration resist, clear and wide image quality.

ASSEMBLE:

 
 
1. Please open the carton and check accessories according to the list.
2. Refer the following assemble instruction.
3. Please keep the screen case and the position of plates in horizontal when assembling.

SUGGESTED ASSEMBLING METHODS:

Model A:

---- wall mounting



---- ceiling hung

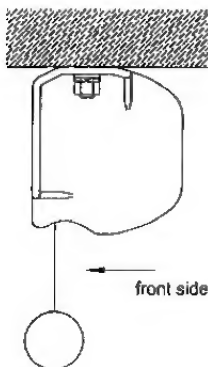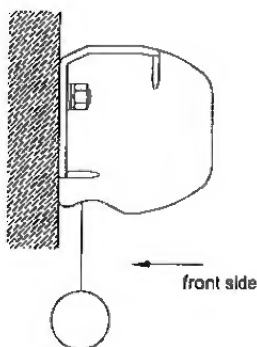

Model B:

---- wall mounting

  ---- ceiling hung

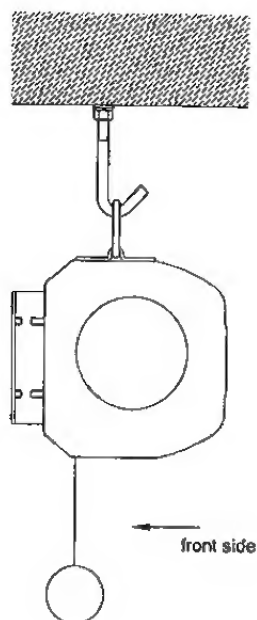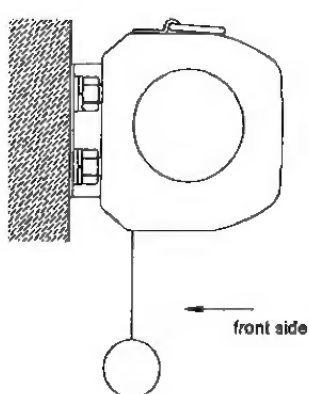

OPERATION:

1. Open the fabric

Pull down the fabric slowly about 50mm lower than the desired position, then loose, the screen will self-locking. When the top black border appear, please do not draw more heavily to avoid fabric damaged.

2. Take back the fabric

After usage, pull down the fabric a little, then loose slowly, the screen will unlock automatically and fabric will retract back into the case.

3. Self-lock and unlock

Pull down the fabric-loose-selflock-pull down-loose-unlock-pull down-loose-selflockoperation as the same circle.

FABRIC CLEANING:

1. Glass beaded fabric: dry-clean
2. Matte white: washable by soft soap and warm water, please do not use alcohol or ether liquid to wash, thus will degenerate the fabric
3. Silver grey fabric: clean method same to the matte white
4. Video spectra fabric: clean method same to the matte white

REMARK:

1. Do not scratch or fold up the fabric
2. After usage, please check again there are no other foreign objectives on the screen surface and then draw back the fabric into the case.

ATTACHMENTS:

Expansive bolts: 2pcs
Pole 1 pc (optional)